


**CR86**

**indelB**


**F-KIT CR86: INSTALLATION**

INDEL B NORTH AMERICA INC  
100 TRIPORT CIRCLE  
GEORGETOWN, KY 40324


1. Remove the 3 screws from the top of the fridge as shown in the diagram.

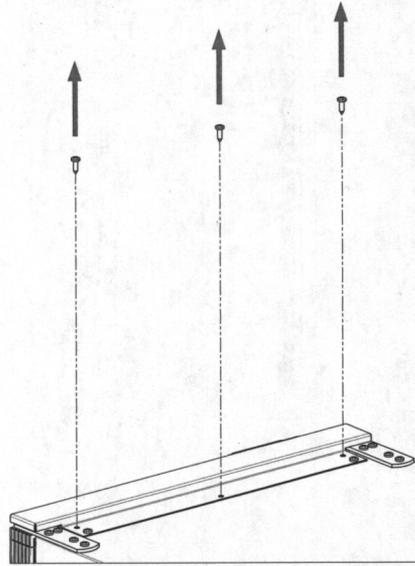

2. Place the vented upper flange on top of the fridge and reinstall the 3 screws from step 1.

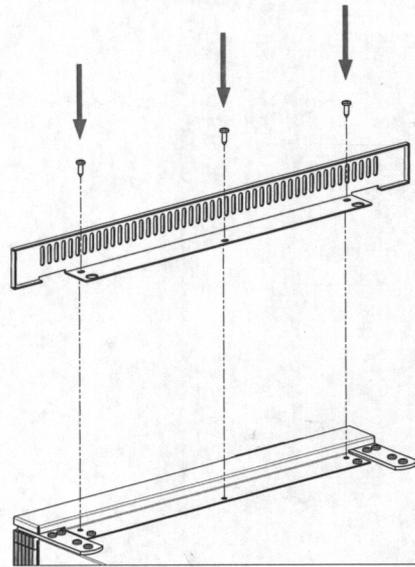

3. Locate the 4 recessed marks on the sides of the fridge as shown in the diagram.

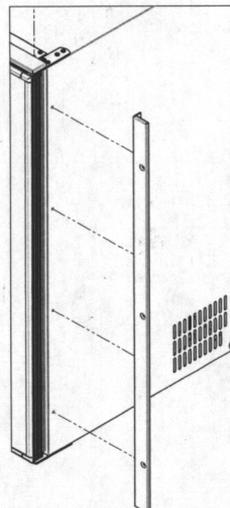


# CR86

**indelB**

**INDEL B NORTH AMERICA INC  
100 TRIPORT CIRCLE  
GEORGETOWN, KY 40324**

4. Drill each mark with a 3/32" drill bit.

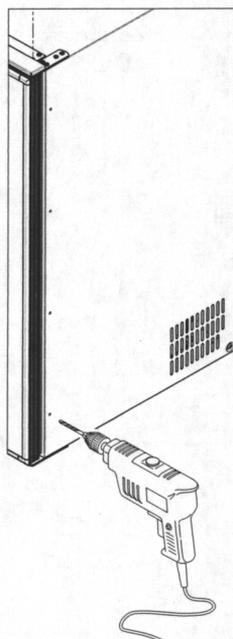

5. Attach the flange with 4 screws. Repeat for both sides. (8 screws supplied.)

