



ULTRAFLEX S.r.l.

Manufactured by
Ultraflex S.r.l.
Via Sturla 32
16131 Genova - Italy
Ph. 10/35651 - Fax 10/3565351

K52


ISTRUZIONI PER IL MONTAGGIO ASSEMBLY INSTRUCTIONS INSTRUCTION POUR LE MONTAGE

K52-Kit per la regolazione a scatti ravvicinati della leva comando acceleratore.

Utilizzabile sui comandi bileva mod. B 203 - B 204 - B205

K52-Kit for close release regulation of the throttle lever to be used on B 203 - B204 - B 205.

K52-Kit pour la regulation a declenchements rapproches du levier accellerateur à utiliser sur B 203 - B 204 - B 205.

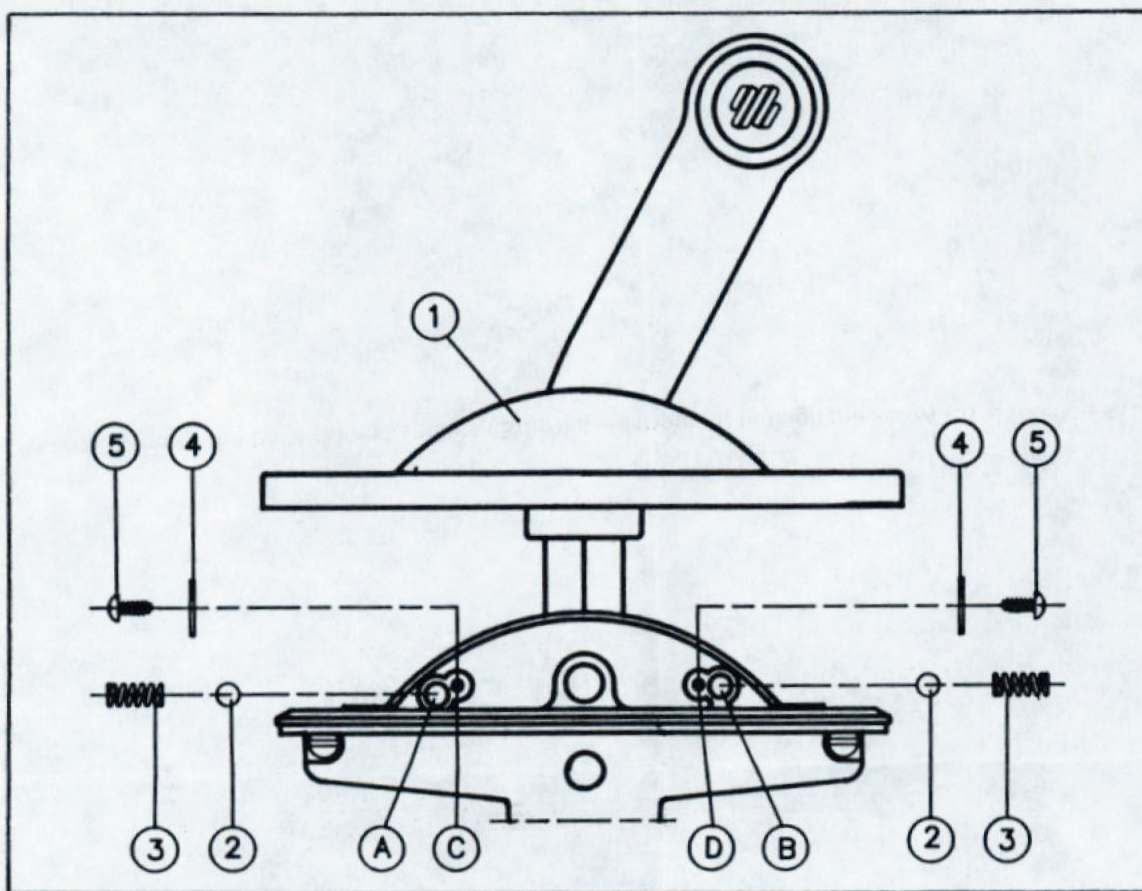

- Sollevare il coperchio (1)
- Inserire nei fori (A) e (B) le sfere (2) e le molle (3), fissare le rondelle (4) per mezzo delle viti (5) ai fori (C) e (D).
- Lift the cover (1)
- Insert in (A) and (B) holes the balls (2) and springs (3) fix the washers (4) through the screw (5) to the holes (C) and (D).
- Soulevez le couvercle (1)
- Inserez dans les trous (A) et (B) les spheres (2) et les ressorts (3), fixez les rondelles (4) par les vis (5) aux trous (C) et (D).

05833 B

59092 Z