

LEWMAR®

Flush Hatch Fitting & Adjustment Instructions

(To be retained in owner's manual for future reference)

B5978 Issue 5

Flush hatches are for use on all craft types in accordance with ISO/DIS 12216.2002, DESIGN CAT "A", AREAS IIa, III and IV. Modification of the hatch by the fitting of vents etc. will invalidate the compliance with the standard.


Fitting Instructions

Flush hatches should be fitted to a flat surface with a maximum tolerance of $\pm 1\text{mm}$ and a minimum deck / hull thickness of 15. Check that all fastenings will be clear of deck moulding radii etc.


Do not open and close the hatch more than necessary until the lower frame is securely mounted.

The Flush Hatch must be fitted into a recess in the deck. The recess must be to the shape specified on Lewmar's drawings. The recess is normally included in the deck as part of the design process for the boat.

The hatch should be mounted with minimum of 10mm between the hinge edge of the acrylic and the edge of the recess and a maximum 8mm radii at the base of the recess. See drawing below.

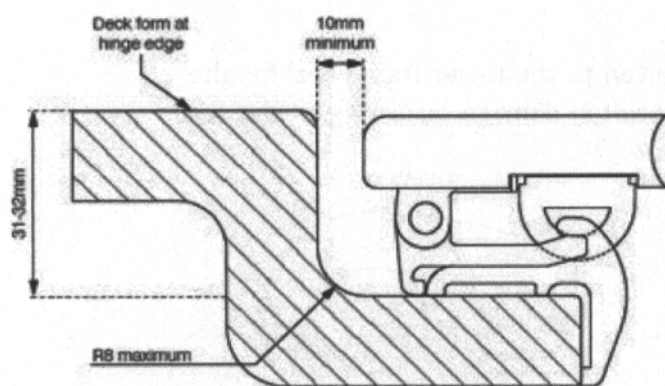

FLUSH 2G

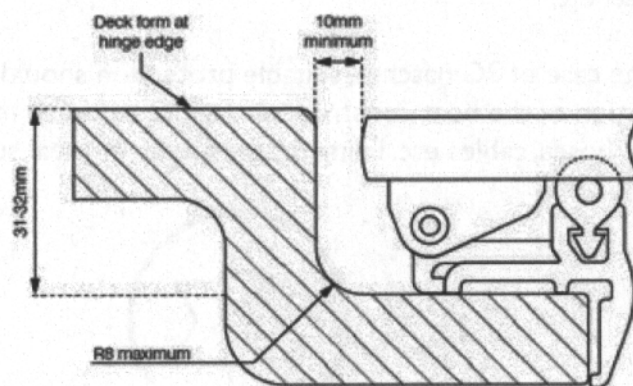

FLUSH 3G

It is essential that the lower frame is placed square on the deck opening. The operation of the hatch should be checked before sealing and fastening to the deck

When fitting a number of hatches it is advisable to prepare a template.

Where the deck is of composite construction, it is recommended that the exposed laminate be sealed with the appropriate material prior to fitting the hatch. Openings cut in metal decks should have all burrs and sharp edges removed.

Hatches should not be considered as stiffening members and it is recommended that the deck be adequately stiffened to prevent distortion during heavy weather.

Re-check the frame on aperture and then apply bedding compound to the channel in lower frame. Bedding compound must have good adhesive qualities (e.g. silicone sealant), be a suitable grade for marine sealing applications, of 3mm minimum thickness and compressible to allow the lower frame to be pulled down in contact with the deck by the securing screws.

Position lower frame over hole and drill two fixing screw holes in opposite corners. Insert appropriate stainless steel fasteners (see below).

- * Be careful not to damage paint when drilling
- * For ideal fixing use Silicone or Tef Gel under the screw head
- * Be careful when fixing screws - Do not DAMAGE paint

Deck type


Wood	M5 through bolts or marine grade wood screws. (Torque to 2.25 - 3.0 Nm) Standard ply / Marine ply - 3Nm Hardwood - 2.75Nm Softwood - 2.25Nm
GRP/Steel/Al Alloy	M5 through bolts or machine screws into suitable tapped plates. (Torque to 3.0 Nm)
Fixing Sizes	M5, 10UNC, 2BA, 3/16", Wood screws (min. length 40mm).
Hinge Fixings	M6 or 1/4" through bolts only.

Drill remainder of holes and fasten down from the center working out to the edges. Clean off surplus sealant.


Through bolts should be used where fixings pass through lower hinges (M6 or 1/4" only).

Once installed check again for correct operation of the hatch lid, i.e. closing/locking, even pressure of seal etc.

In the case of 3G hatches, suitable protection should be given to the lower frame seal for the duration of the boat construction. Failure to do so may result in damage occurring to the seal from hoses, cables etc. being dragged over the seal surface.

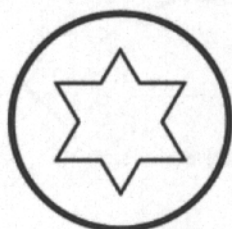

Not suitable for ISO 9094 emergency access

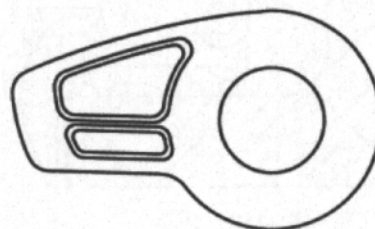

Suitable for ISO 9094 emergency access

User Notes

The locking ventilation position is used by closing the handles into the catch block center slot. Care should be taken not to stand on or load the hatch lid in this position, as damage could occur to the handle or catch block.

Always wash the hatch with soap, water and a soft cloth. **Never use abrasive or solvent cleaners on the acrylic lid, as this may at a later date damage the acrylic.**

3G hatches are intended predominantly for light and ventilation. Sizes 44, 54 and above are also suitable for emergency access/evacuation, in accordance with ISO 9094, provided they are fitted with exterior handles. **Protect the seal if used as regular access for people, sails or equipment.**

To avoid risk of injury care should be taken to keep hands and limbs clear of lever and lid pinch zones while operating and adjusting the hatch.